


1. Power input
2. Back-up battery cover
3. Battery compartment
4. SET
5. UP
6. DOWN
7. Aerial
8. FM
9. VOL+
10. SCAN
11. VOL-
12. Hour/year Display
13. Temperature/Day-Month Display
14. Charging cable

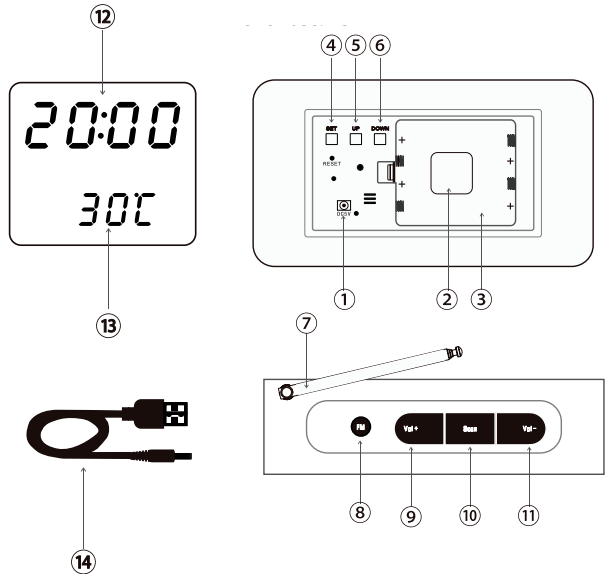

Read this manual carefully and retain for future reference.

### Product description

This wooden radio shows the time, date and ambient temperature, and allows you to listen to your favourite radio programmes at any hour of the day.

### This kit contains

- 1 wooden alarm clock
- 1 CR2032 back-up battery
- 1 USB charging cord

### Details:

- Input: DC 5 V
- Power supplied by standard USB port and/or 4 AAA, 1,5V
- Maximum ambient temperature for use: 25

### Functions

- Display showing perpetual calendar (2000-2099), time, and date
- Thermometer: display in C (0-50) or F (32-122)
- Choice of 12 or 24 hour clock
- Energy saving function

### Cleaning and storage

Clean the device using a soft, dry cloth.

Do not use detergent as this may damage the device.

### Start-up

#### Power, battery insertion and replacement.

- USB Power supply
- Insert the plug on cable (14) into the power input port (1) then connect the other end of the cable to a standard USB port on a computer.
- Battery power supply-Open the battery compartment (3) and insert 4 AAA LR03 1.5 V batteries, taking care to follow the polarity as indicated.
- Close the battery compartment.
- Replacing the back-up battery.
- Open the battery compartment (3) and remove the AAA batteries if necessary.
- Open the back-up battery cover (2) using a screwdriver.
- Remove the old battery and insert a CR2032 battery, taking care to follow the polarity indicated.
- Close the cover and the battery compartment.

## Main control adjustments

- Press **SET** (4) for 3 seconds and the year will begin to flash.
- Press the **UP** (5) or **DOWN** (6) buttons to set the year, then press **SET** (4) to confirm, next the month (12) will flash.
- Press the **UP** (5) or **DOWN** (6) buttons to set the month (12), then press **SET** (4) to confirm, next the day will flash.
- Press the **UP** (5) or **DOWN** (6) buttons to set the day (12), then press **SET** (4) to confirm.
- Press the **UP** (5) or **DOWN** (6) buttons to set the time format (12 or 24 hour clock), then press **SET** (4) to confirm, next the hour will flash.
- Press the **UP** (5) or **DOWN** (6) buttons to set the hour (12), then press **SET** (4) to confirm, next the minutes (12) will flash.
- Press the **UP** (5) or **DOWN** (6) buttons to set the minutes (12), then press **SET** (4) to confirm, next the alarm clock mode (12) will flash.
- Press the **UP** (5) or **DOWN** (6) buttons to activate the alarm (**ON**) or to deactivate it (12), then press **SET** (4) to confirm, next the alarm hour (12) will flash.
- Press the **UP** (5) or **DOWN** (6) buttons to set the alarm hour (12), then press **SET** (4) to confirm, next the alarm minutes (12) will flash.
- Press the **UP** (5) or **DOWN** (6) buttons to set alarm minutes (12), then press **SET** (4) to confirm.

## Alarm Mode

- Press the **FM** button (8) to deactivate the alarm.

## Radio Mode

- Press the **FM** button (8) to activate the radio.
- Press the **SCAN** button (10) to skip to the next frequency.
- Press the **VOL +** (9) or **VOL -** (11) to adjust the radio volume.

## Adjusting temperature mode C / F

1. Press **UP** (5) button to change to F mode.
2. Press **UP** (5) button again to revert to C mode.

## Adjusting display

1. Press the **SET** (4) button and the DP-1 mode is activated showing the time, temperature and date.
2. Press the **SET** (4) button again to change to DP-2 mode to display the time and temperature only.

## Adjusting energy saving mode

1. This mode allows you to turn off the screen display and to reactivate it by clapping your hands as a way to save energy.
2. Press the **DOWN** (7) button to activate the energy saving mode and press the **DOWN** (7) button again to deactivate it.

## Notes

It is not possible to make adjustments when the radio is playing.

## Warnings while using product

- Do not use any cable apart from the one supplied with the device for recharging.
- Take care not to open, modify or take apart the device.
- Taking the product apart may cause the risk of electric shock or fire. In the event of product malfunction, take your device to a specialist technician.
- Keep the device protected from rain, water or moisture when in use.
- Do not allow the device to come into contact with combustible materials or high levels of heat.
- Do not dispose of in fire or flames.



## Note about disposal

When no longer usable, dispose of this product at a collection point for electrical and electronic equipment waste recycling.