


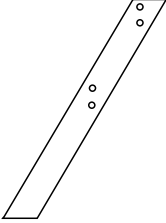
 



 

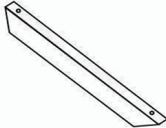
2450039 / 2450040 / 2450041

ASSEMBLY INSTRUCTION

<<Before assembling, read all the instruction>>


ATTENTION: KEEP OUT OF DIRECT SUNLIGHT

Parts List:


A 6pcs 	F 4pcs 	G 2pcs 
B 2pcs 		O 1pc 
C 1pc 		H 16pcs 
D 2pcs 	E 2pcs 	

Assembly:


1

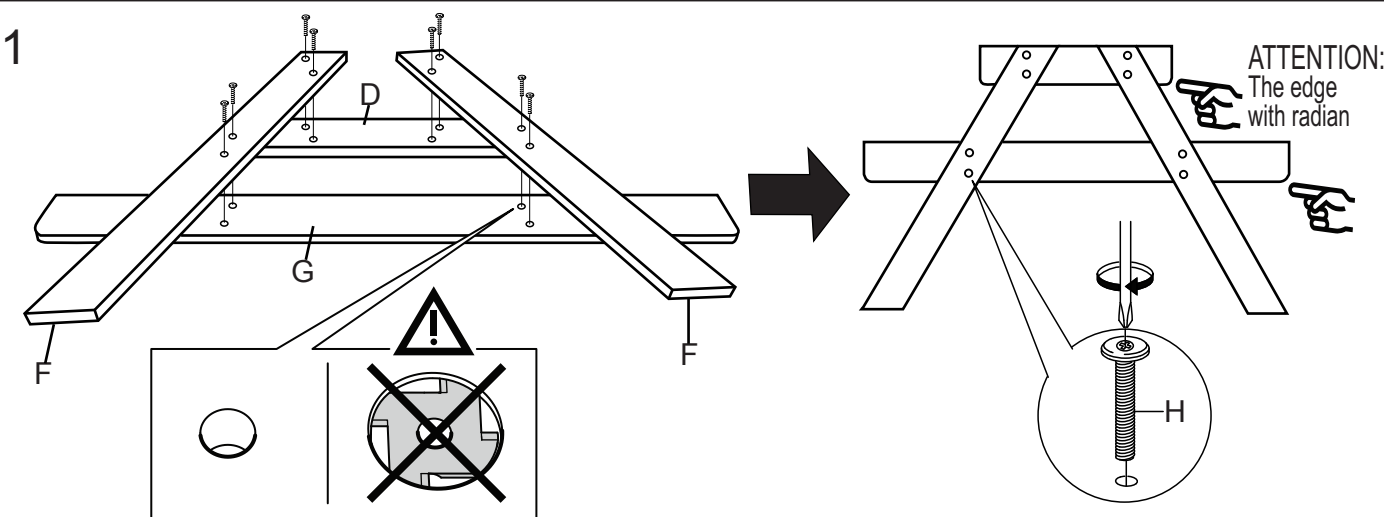



2

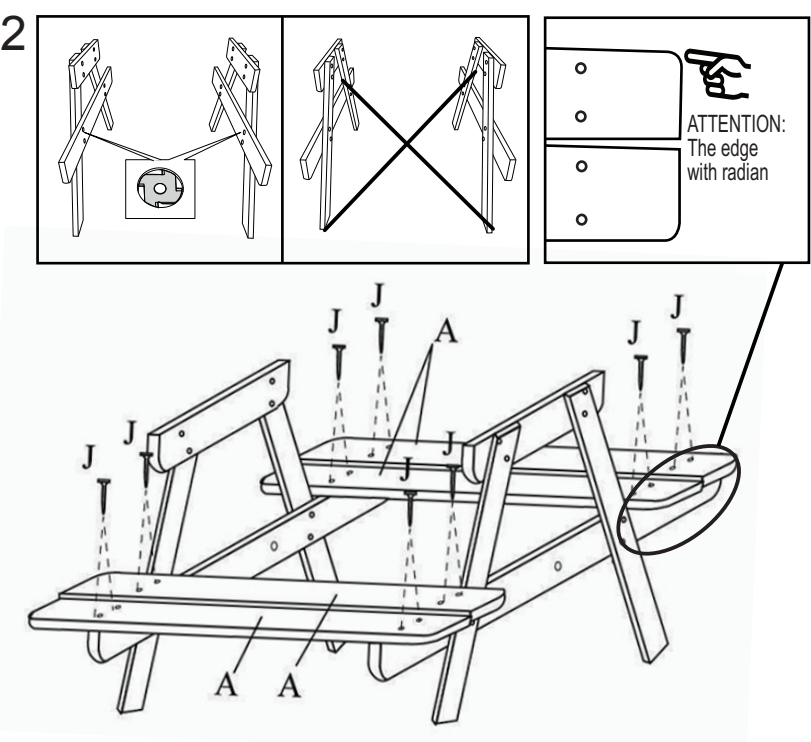


3

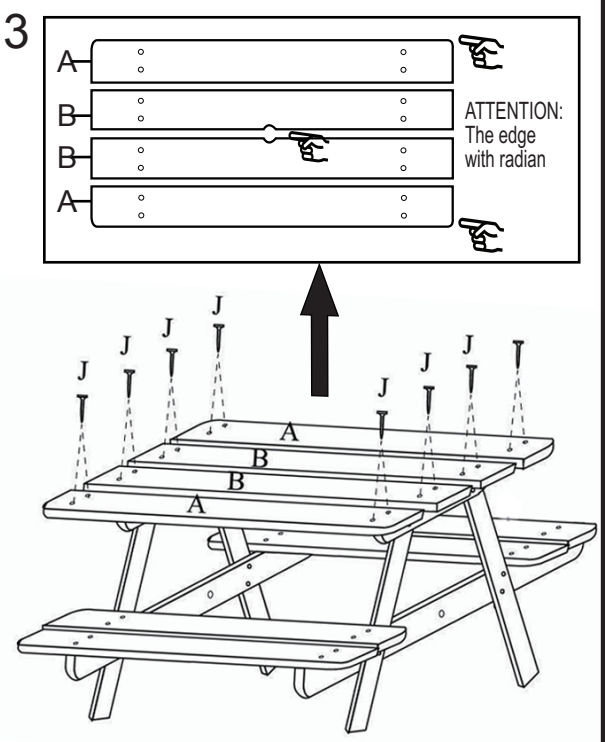


4

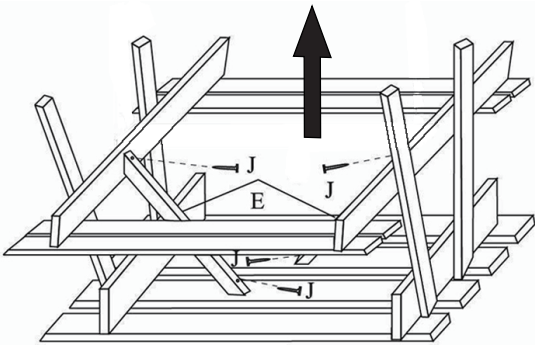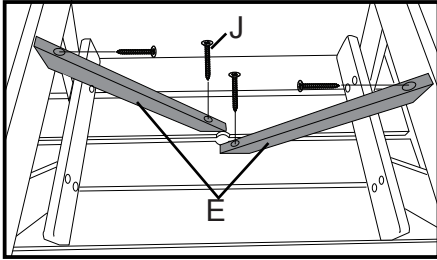


5

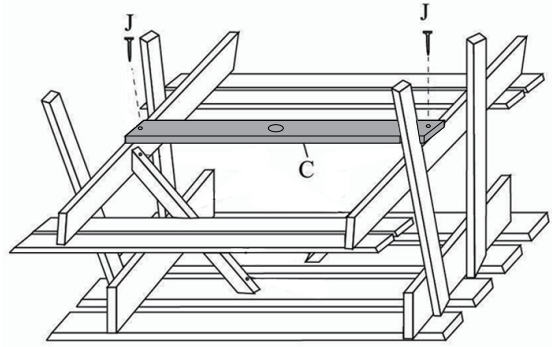

6

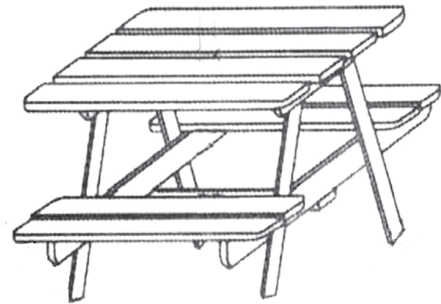

7

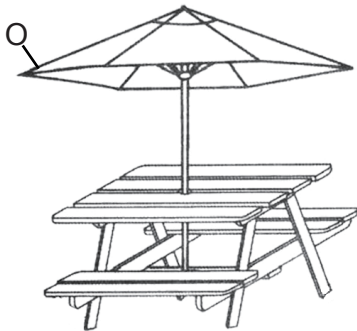

1. Please keep fingers out of the mechanism when opening and closing and never allow unsupervised children to operate the equipment .
2. Keep away from naked flames like BBQ's and other heat sources that may be likely to cause fire.
3. Polythene bags are dangerous and can suffocate babies and small children. Please dispose of these very carefully.
4. Please retain these instructions for future reference.

WARNING :

1. This is not a toy-must be assembled by an adult.
2. Adult to read and follow these instructions and keep them for future reference.
3. Age Suitability-3 to 8 years.
4. Please carry out checks and maintenance of main parts at regular intervals. If these checks are not carried out, the product may cause a fall or overturn.
5. Warning! Not suitable for children under 3 years due to small parts.
6. This item is not designed for children to stand or climb on.
7. Maximum weight capacity: 100KGS.
8. This product should be used by children under the supervision of an adult.