 


MELVA L

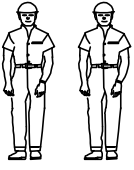

15min



(D) Montageanleitung

(NL) Handleiding voor de montage

(TR) Montaj talimati

(F) Notice de montage

(CZ) Montážní návod

(GB) Assembly instructions

(HU) Szerelési útmutató

 
 
 
(PL) Instrukcja montażu

(RU) Инструкция по монтажу


(IT) Istruzioni di montaggio

(SK) Návod na montáž


(RO) Instrucțiuni de montaj

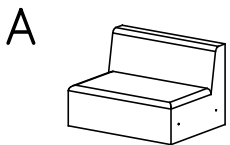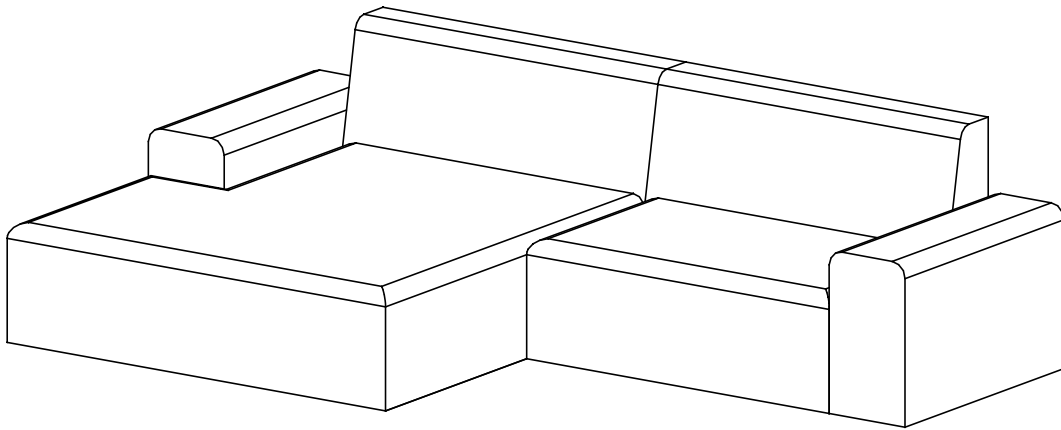

x1

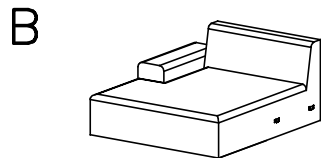 


x1

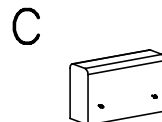 


x1





 
x2












x2

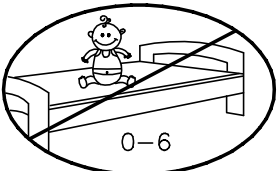 

0-6

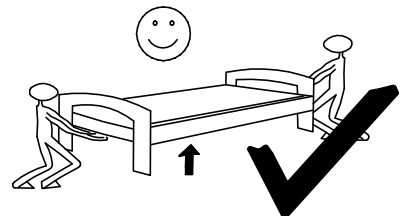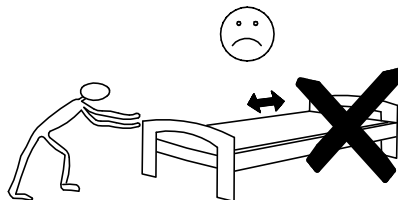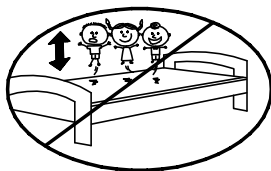   

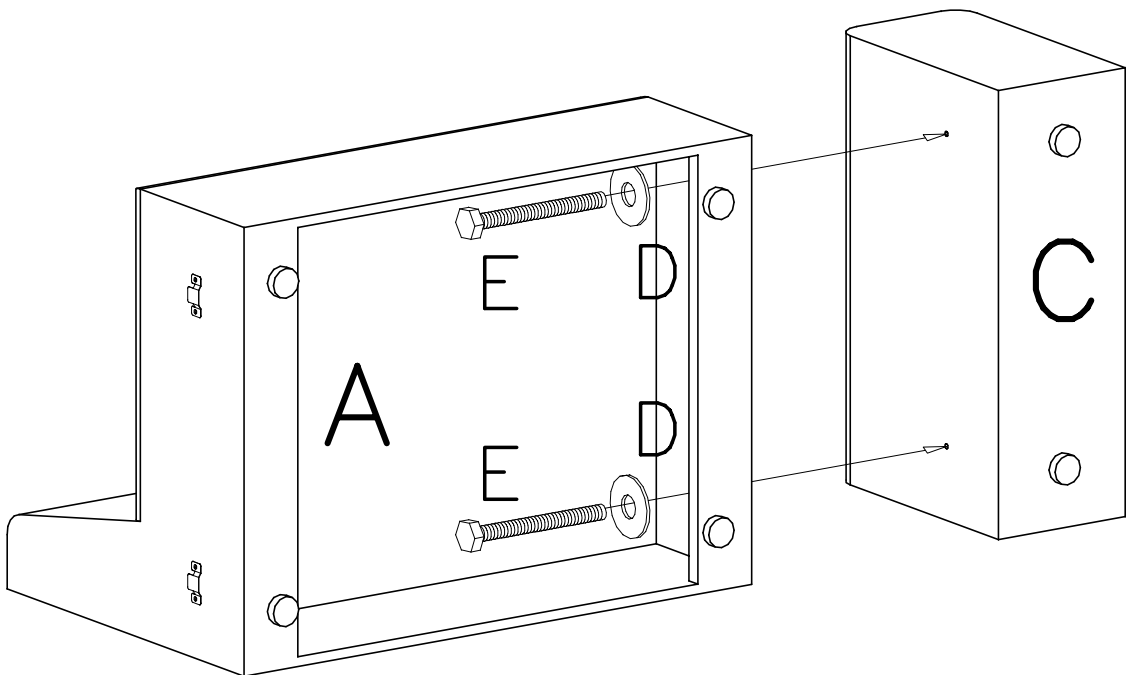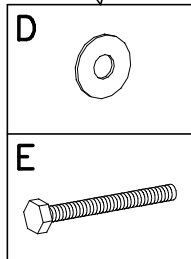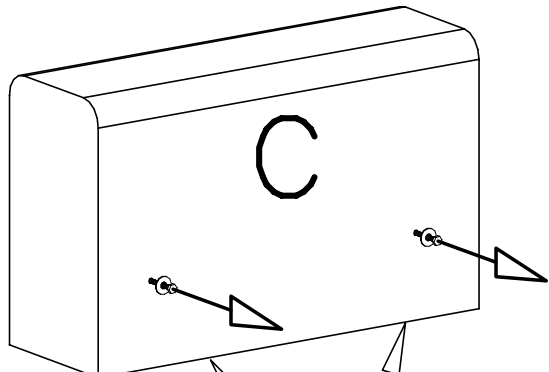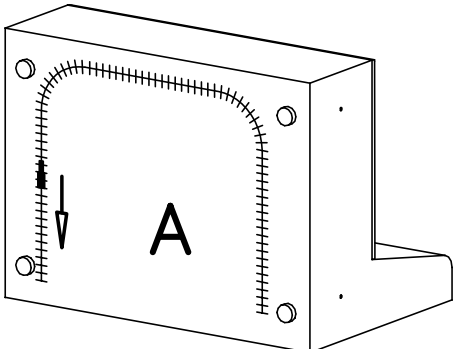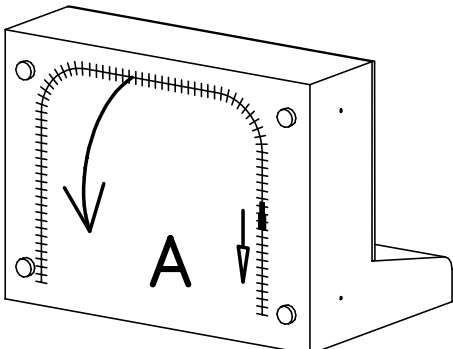     

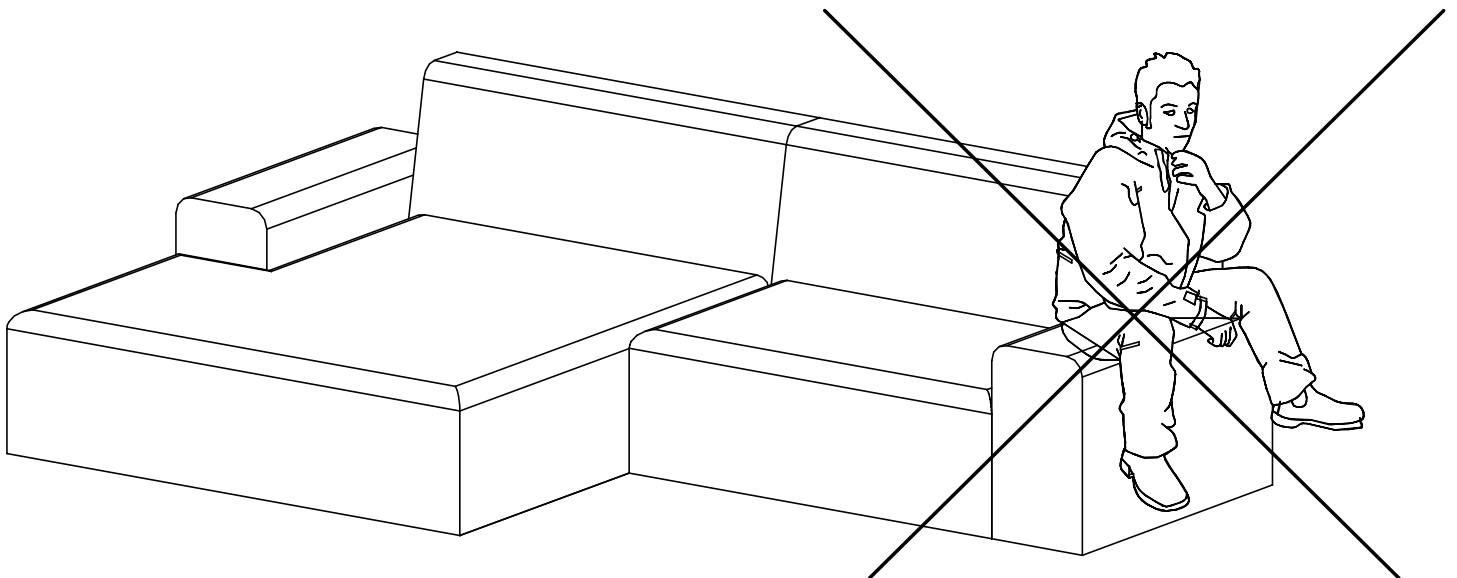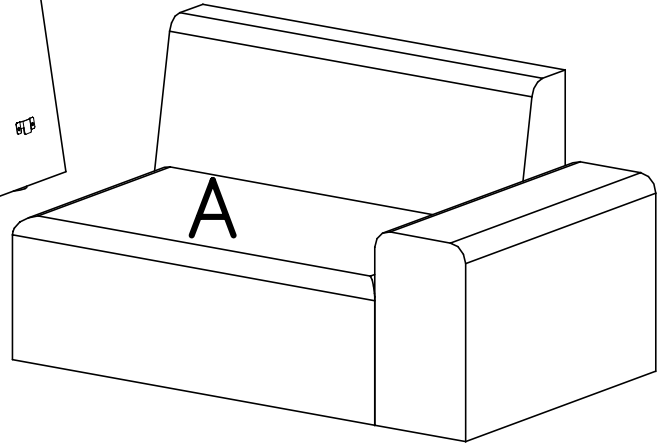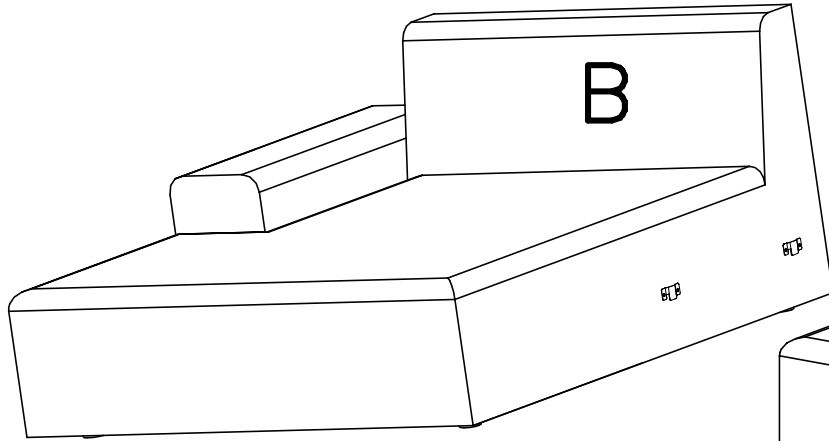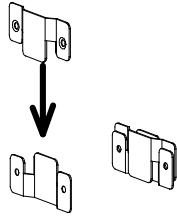    





Service • Assistenza • Dienstverlening • Serwis •
 Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam •
 Nazwa • Jméno • Názov • Név •
 Denimire • Isim • Название


MELVA L

Nr • No. • N° • Номер • Č • Sz

    Type • Tipo • Tipus • Typ •
 Тип • Тір

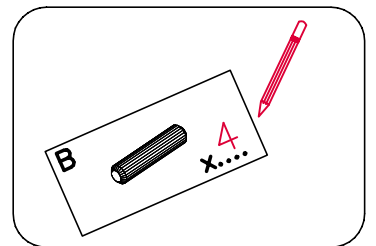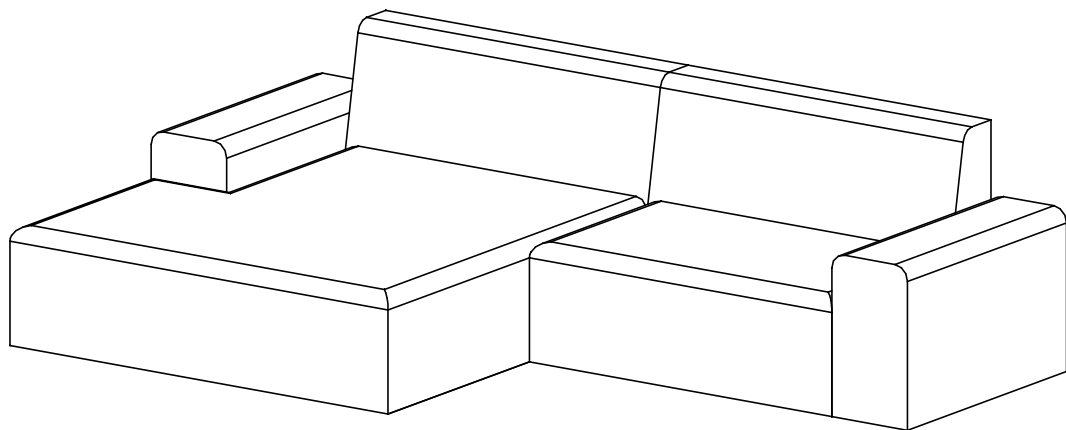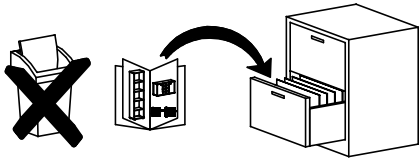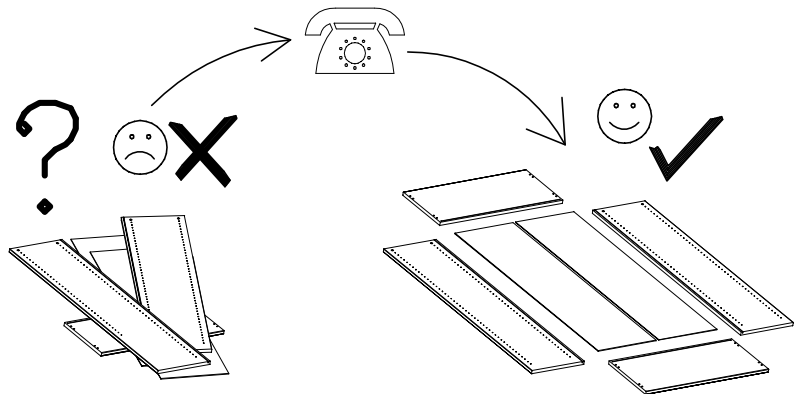


A

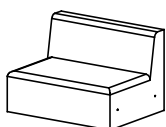 


x...

 B

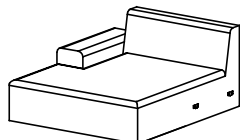

x...

 C




x...

D



x...

 E



x...