
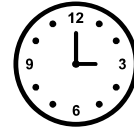



SAINT GERMAIN

canape 3 place


NOTICE DE MONTAGE
ASSEMBLING INSTRUCTIONS




20 MIN




x2

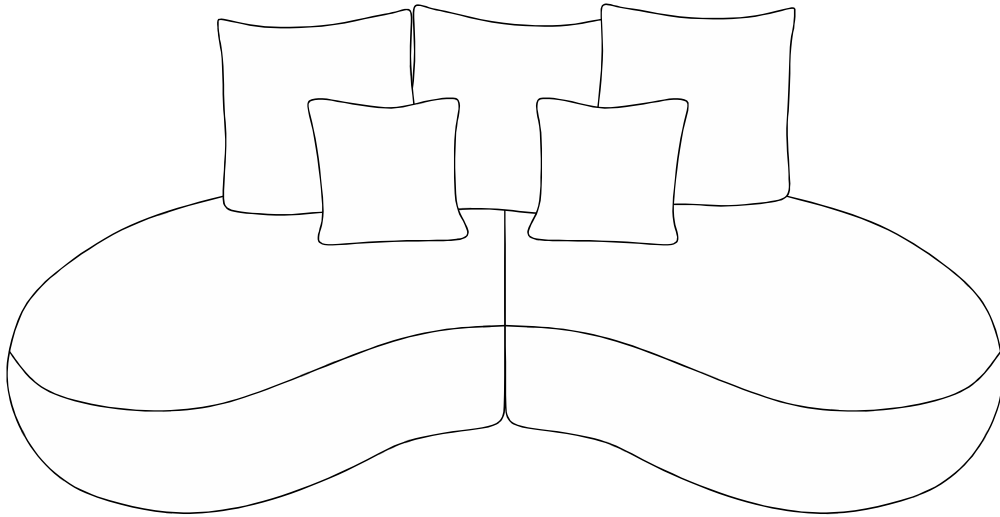


Cx3

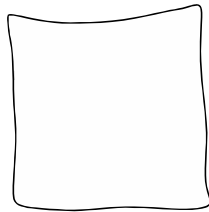




Dx2

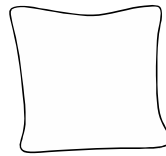

A

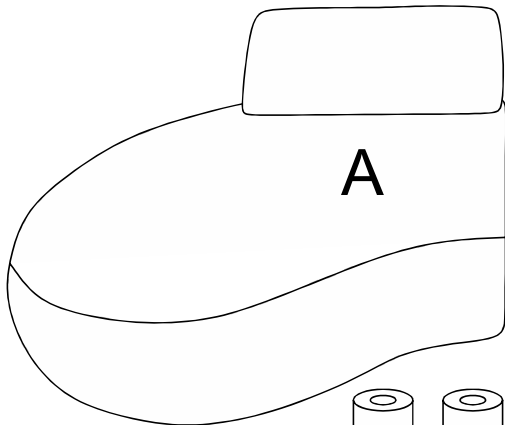

B

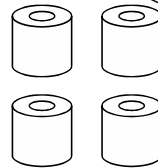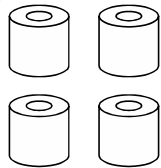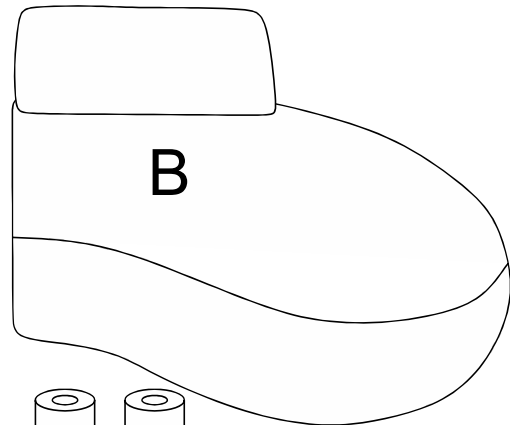

E



x8





F



x8

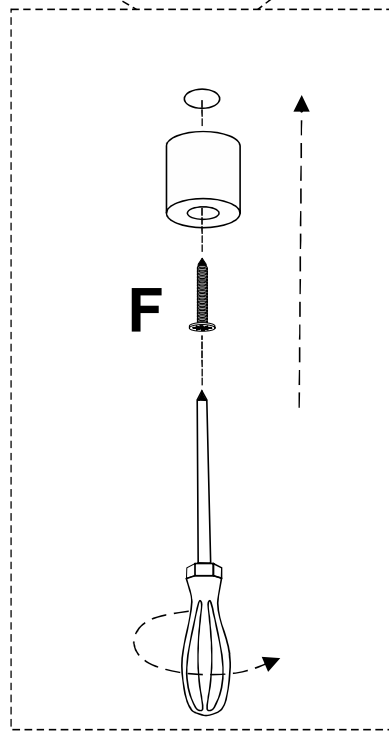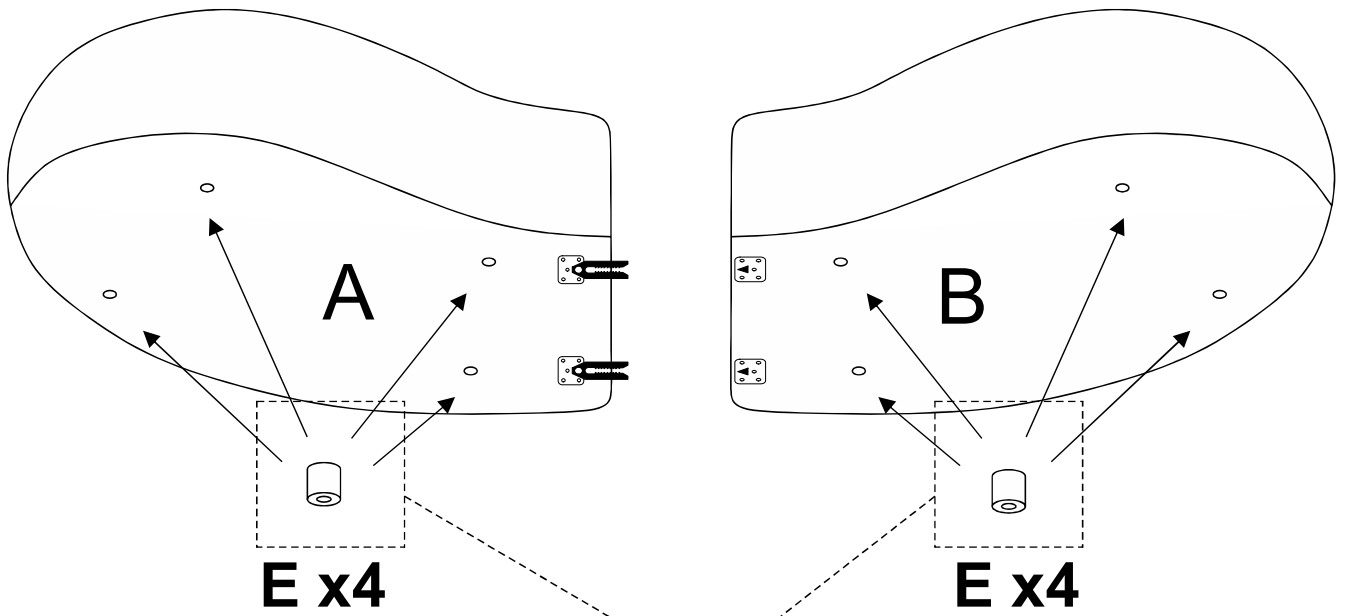1




			
E	x8	F	x8

2



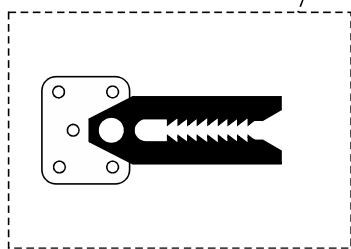
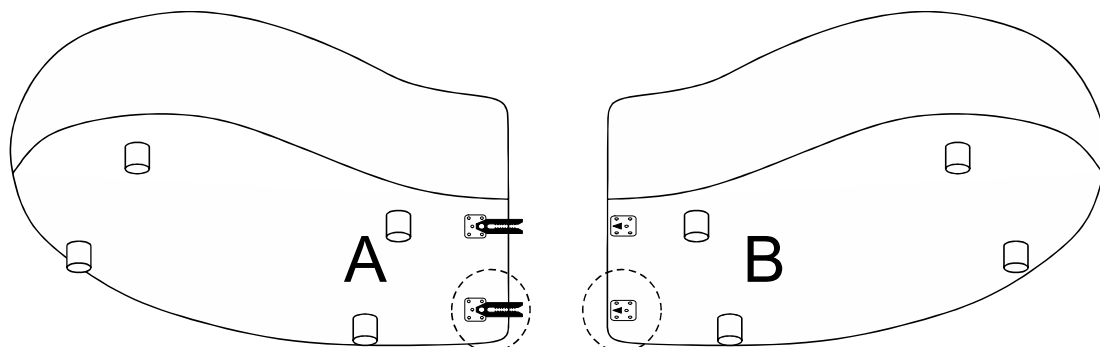


„CROCODILE”

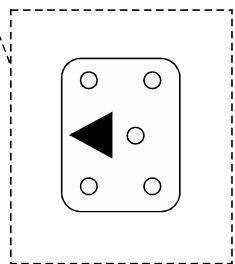

COUPLER

3

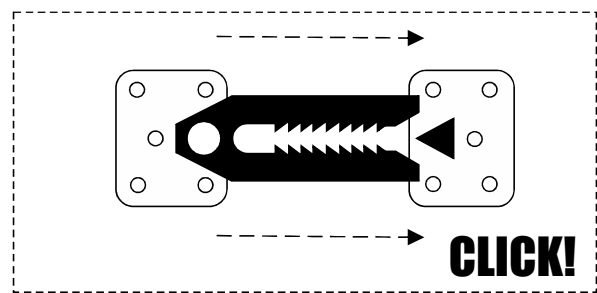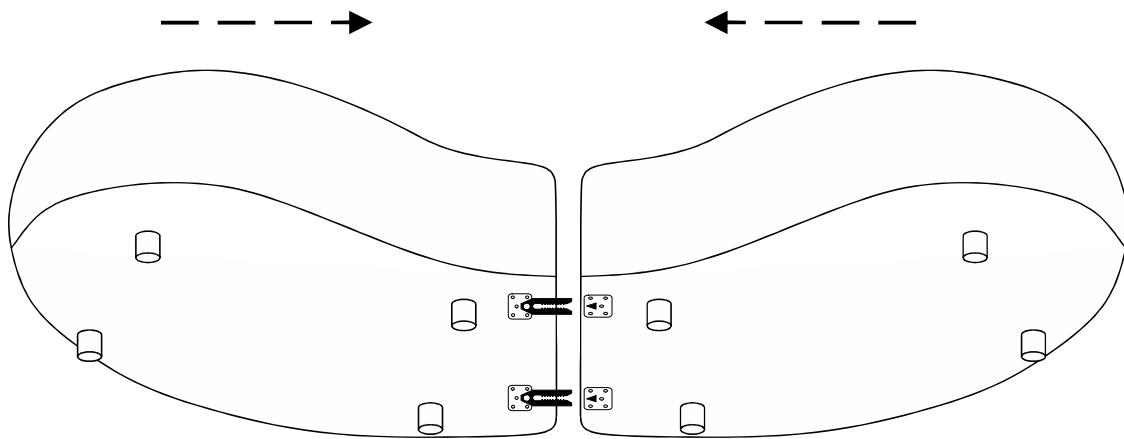

CLICK!



LE TRI
+ FACILE



BAC
DE TRI