



ASSEMBLY INSTRUCTION

ORWEL CONSOLE TABLE  
140x40x45

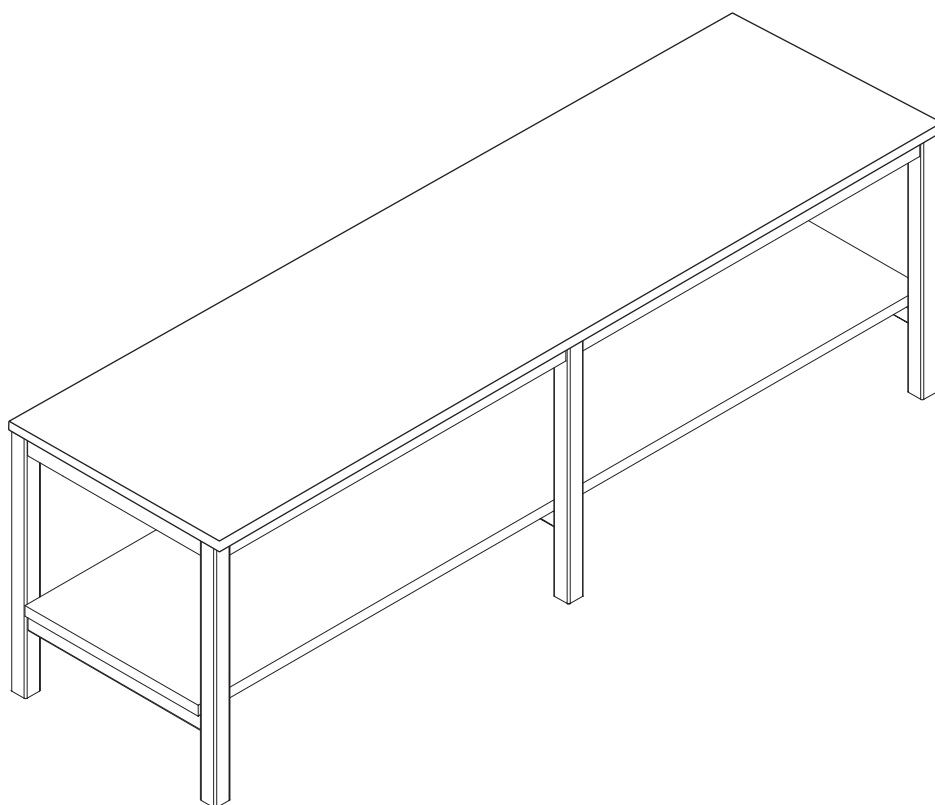




**ROWICO**

HOME


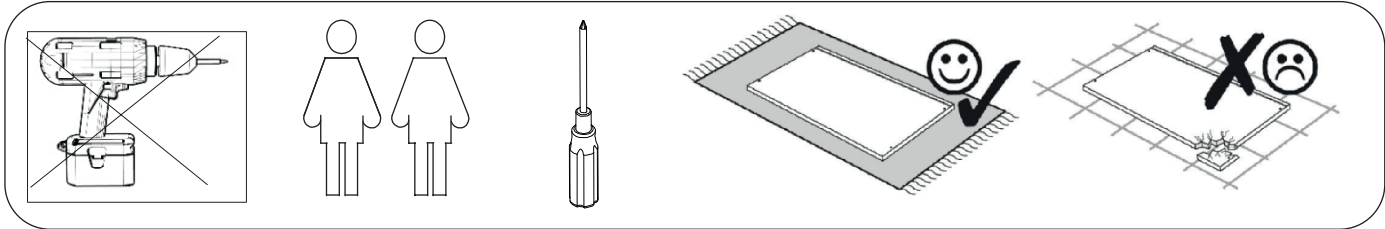


<b>Ax1</b> 	<b>Lx6</b>  Ø6X35mm
<b>Bx1</b> 	<b>Mx6</b>  Ø10X14mm
<b>Cx2</b> 	<b>Nx6</b>  Ø6X7mm
<b>Dx2</b> 	<b>Px4</b>  M6X75mm
<b>Ex2</b> 	<b>Qx2</b>  M6X25mm
<b>Fx2</b> 	<b>Rx6</b>  Ø6
<b>Gx1</b> 	<b>Sx6</b>  Ø6X16mm
<b>Hx2</b> 	<b>Tx4</b>  M6X60mm
<b>Jx8</b>  Ø8X20mm	<b>Ux4</b>  Ø40mm
<b>Kx10</b>  Ø4X31mm	<b>Vx6</b>  Ø20mm
	<b>Wx1</b>  M4X70X25mm
	<b>Yx1</b>  M3X57X21mm




1

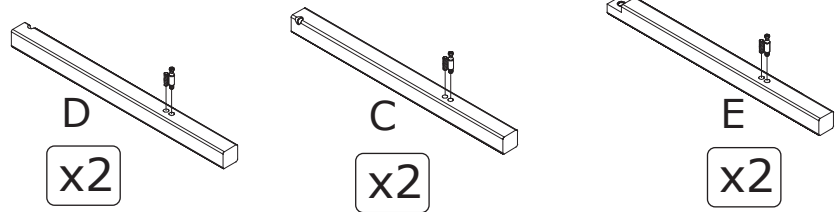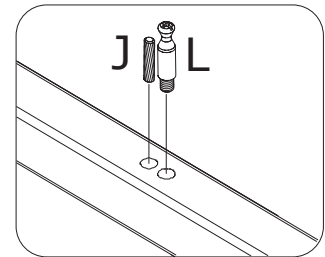

2

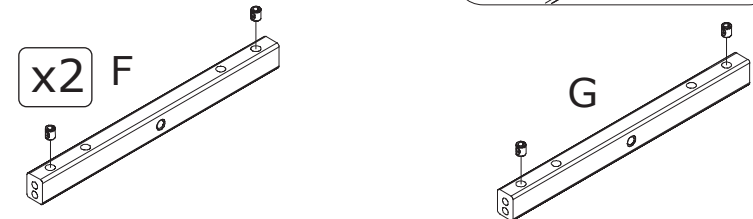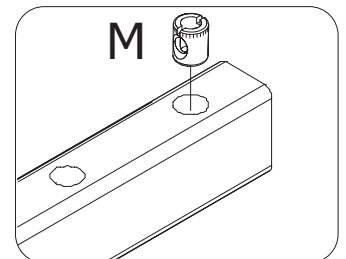


3

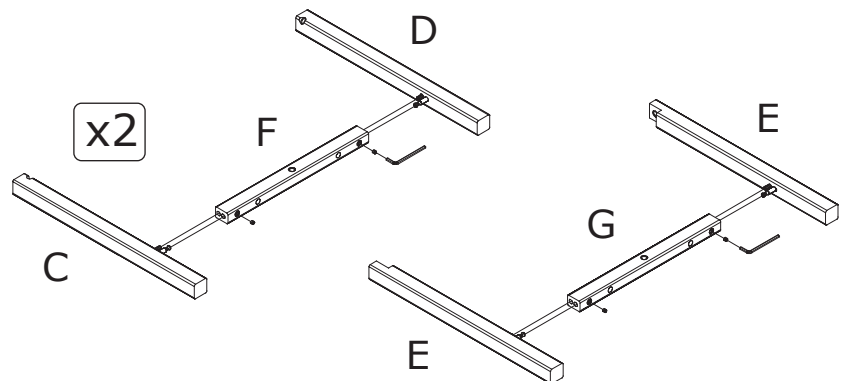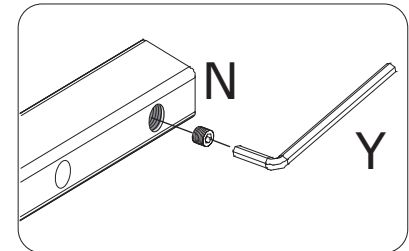



4

Tx4

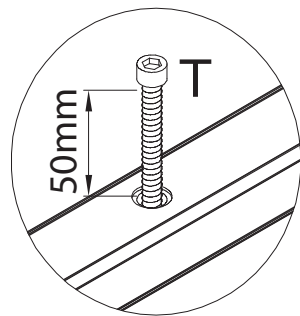

x2

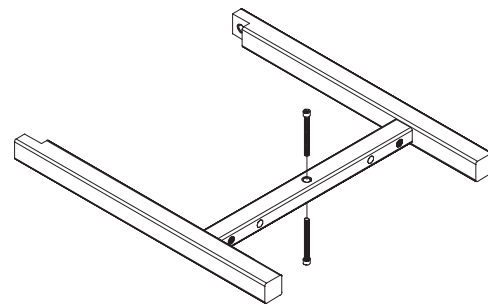
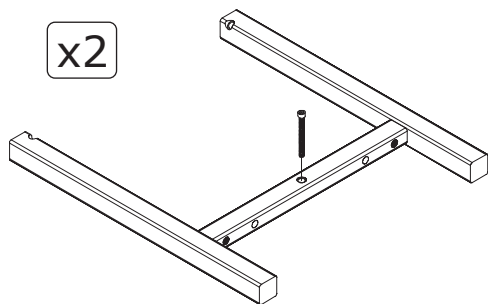


5


Ux4





Wx1

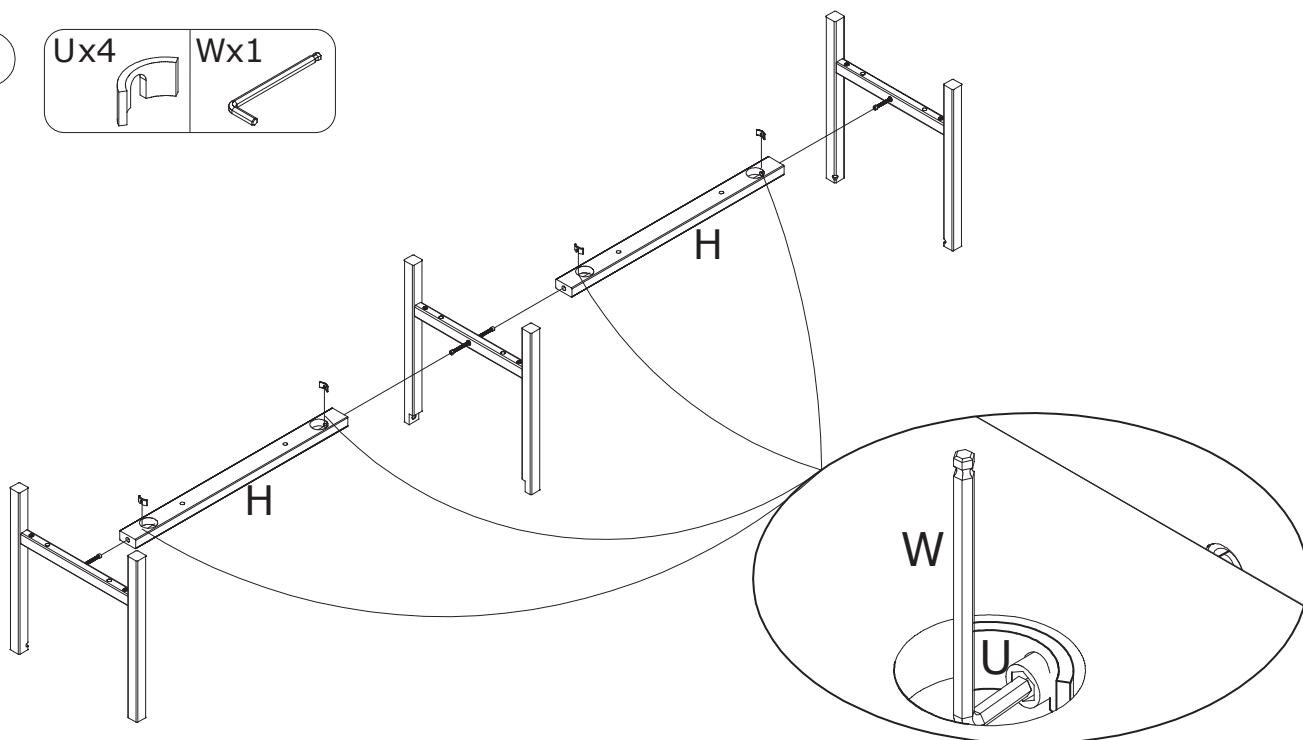


6


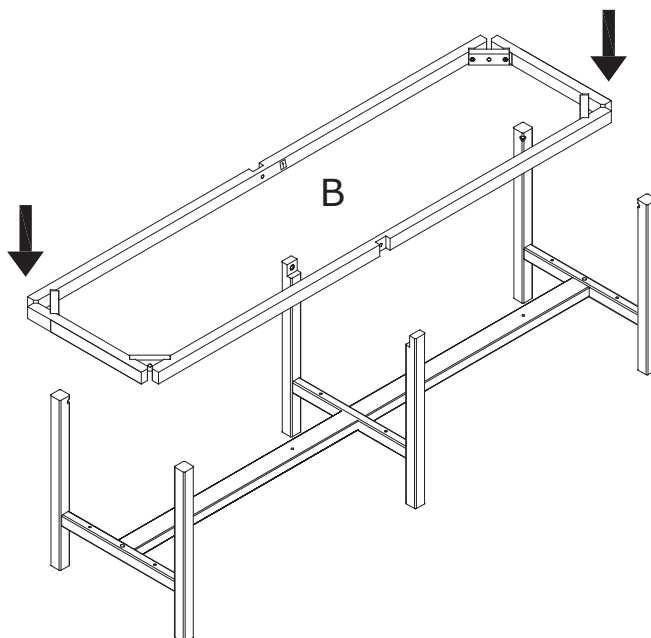


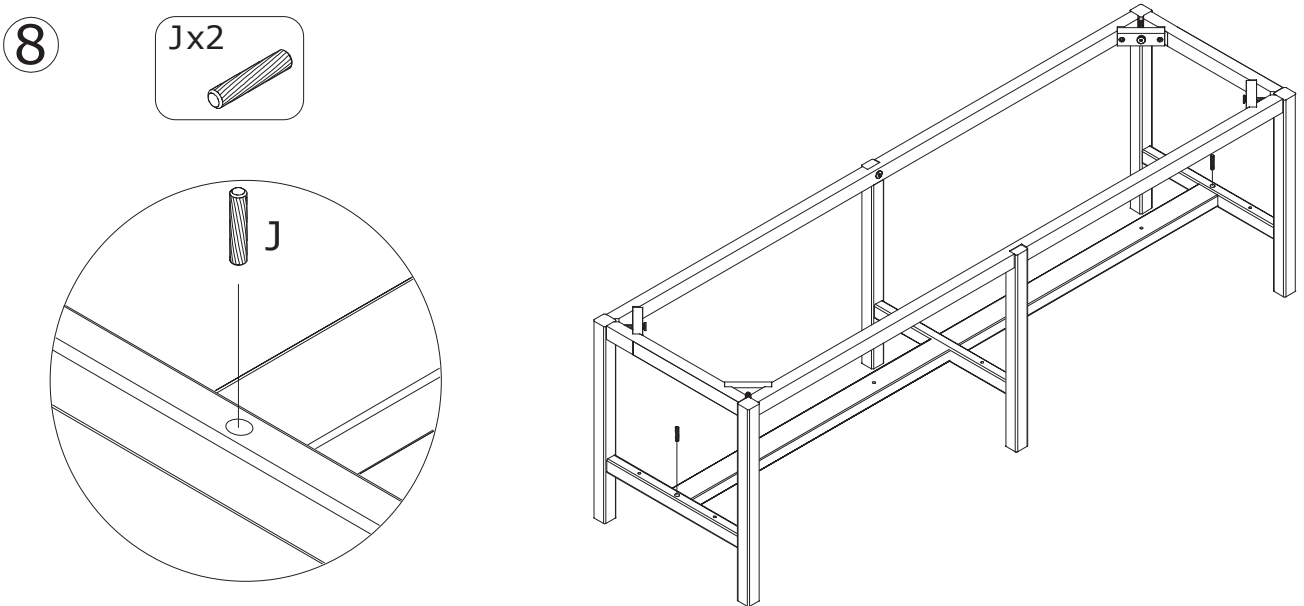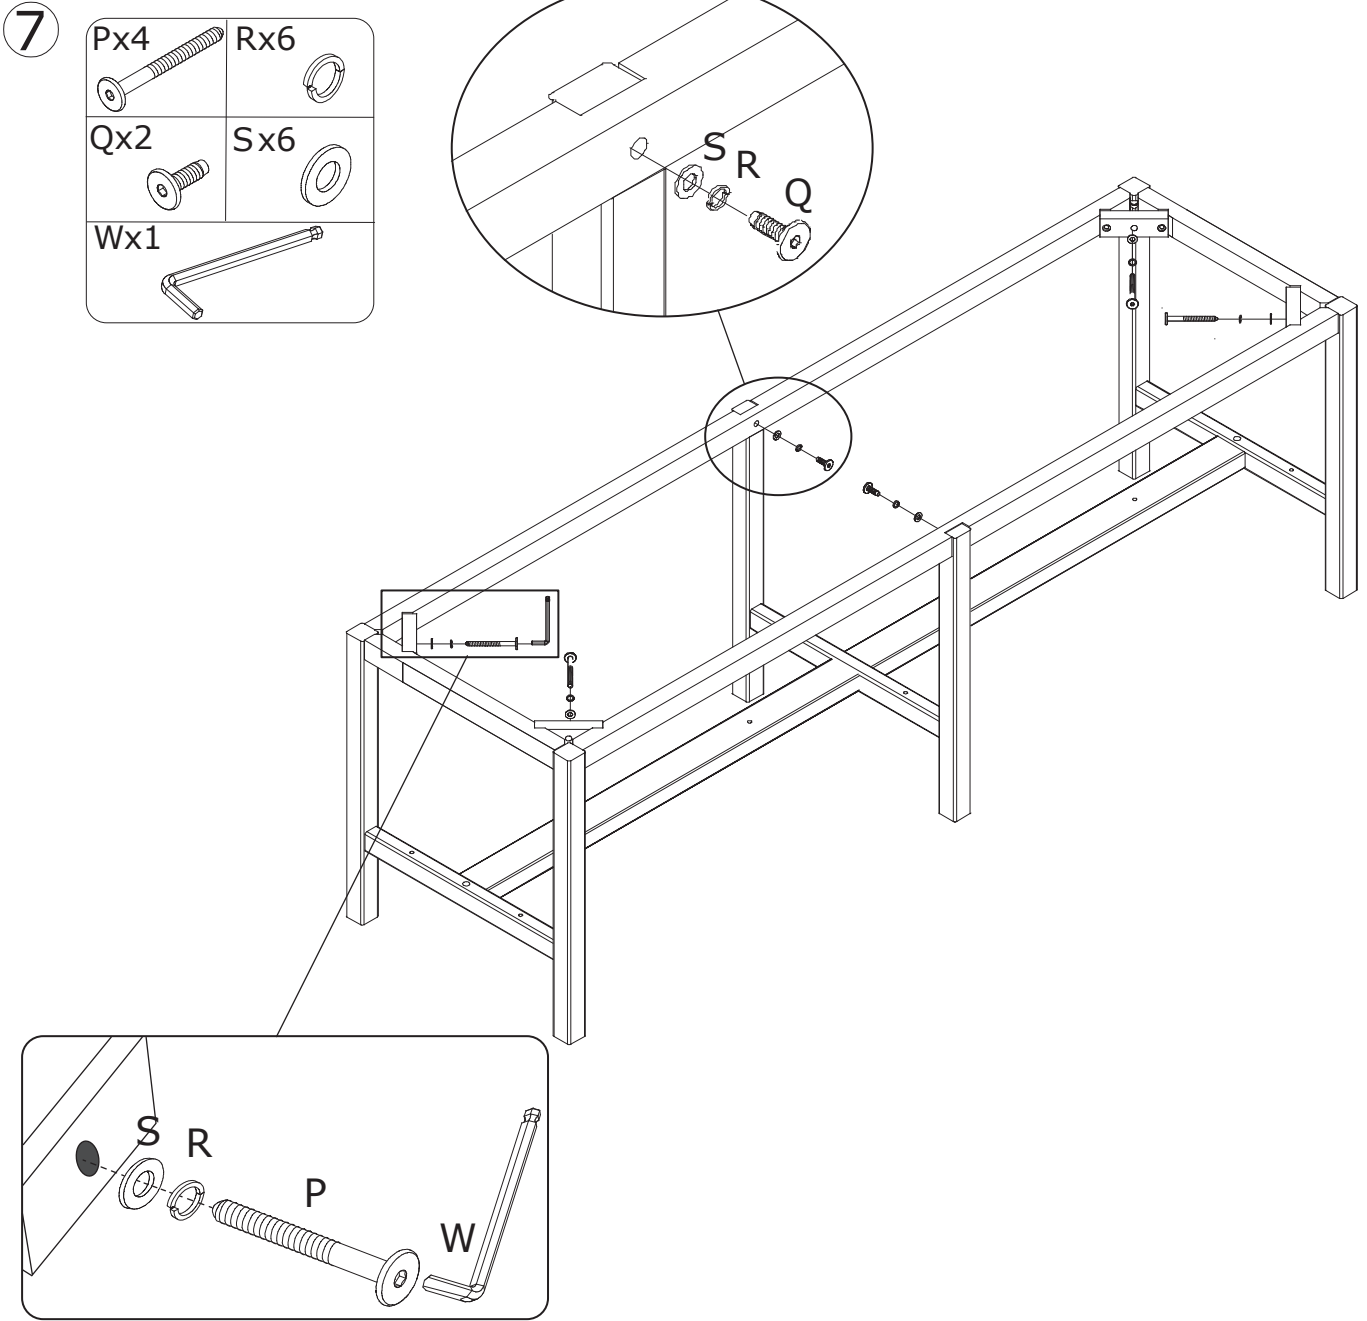



9

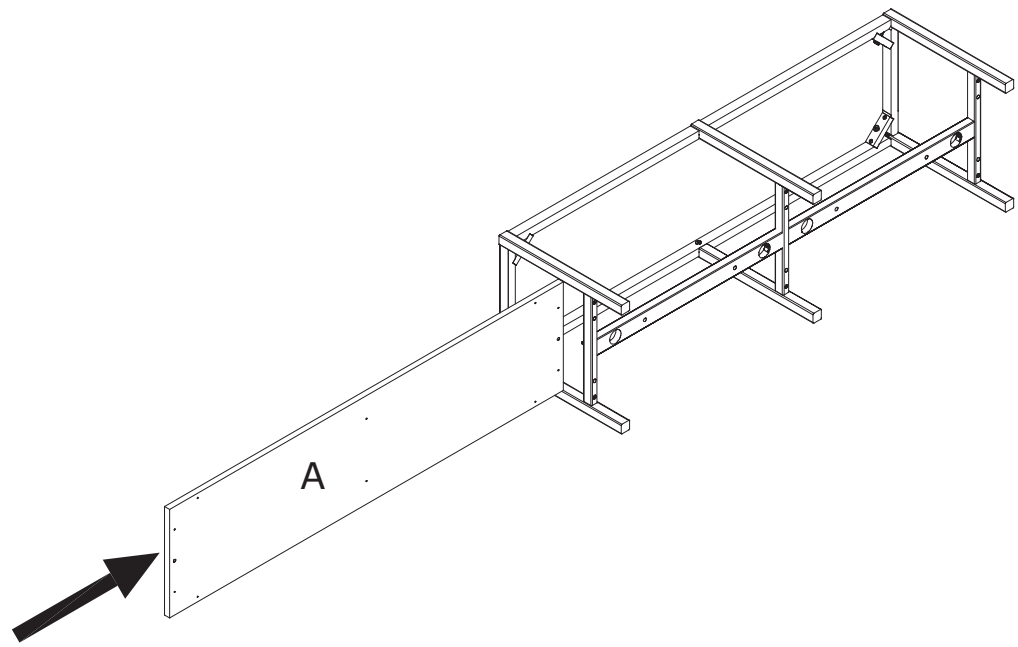

10

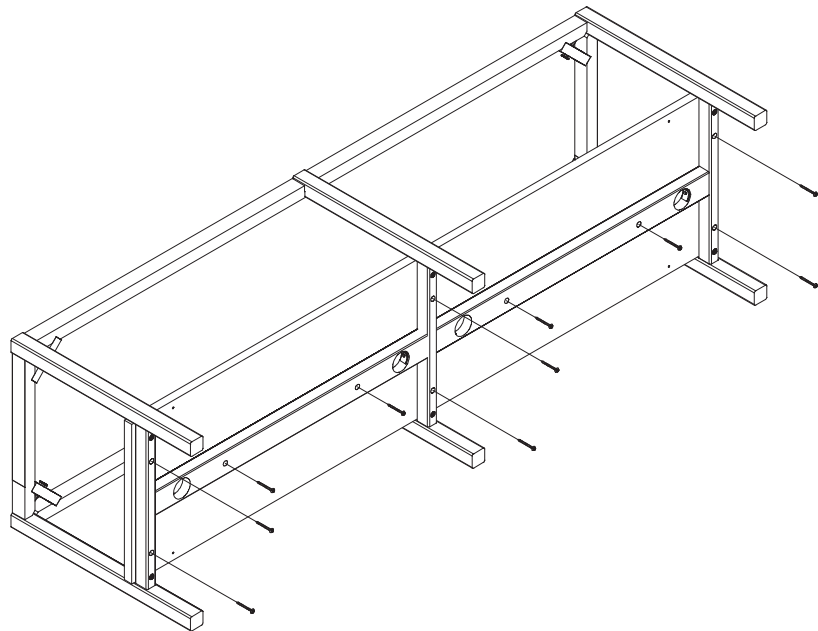

11

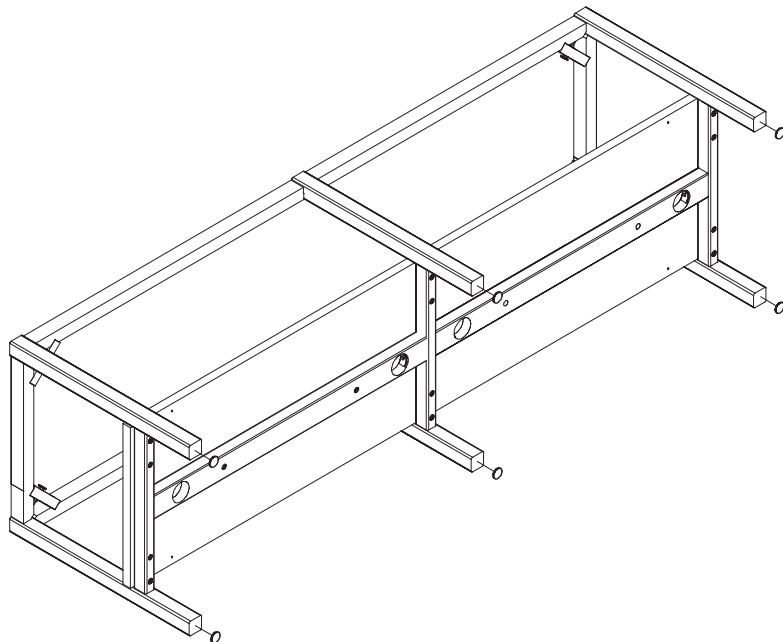



Ställ långsidan på stenskivan mot ramen på benställningen.  
Vik sedan försiktigt ner skivan till korrekt position.

Place the long side of the travertine top on the leg stand frame.  
Carefully fold the top into the correct position.

12

